vtech

THE LEARNING APP TABLET

InnoTab® 2

User's Manual

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36months

3-6years

4-10years

*To learn more about **InnoTab® 2** and other **VTech®** products, visit www.vtechuk.com*

Dear Parent,

At **VTech®**, we know how much you enjoy staying on top of the hottest trends and having the most high-tech gadgets around. We also know that your children feel the same way. With that in mind, we developed **InnoTab® 2**, our multi-function tablet just for children that brings all the magic of mum's and dad's tablets into a fun-filled learning experience that fits their active lifestyles.

InnoTab® 2 is the next generation of learning toys for children that has a rich library of cartridge software with interactive animated e-books, learning games, creative activities along with a wide variety of additional apps. It features a 5" brilliant colour LCD touch screen, a rotating camera and video recorder, a tilt-sensor for game control, as well as a USB port for downloads, SD card slot for memory expansion and a headphone jack, all housed in a sleek, durable and compact design for easy portability.

When playing with **InnoTab® 2**, children can look, listen, touch, and tilt their way through activities to discover a world of fun whenever they want and wherever they go. Through interactive play, your child will develop skills in reading, maths, social studies, science, music, creativity and more—which we know is important to you.

At **VTech®**, we are dedicated to helping your children uncover their talents. We thank you for your trust in our products that encourage active minds through imaginative play.

Sincerely,

The **VTech®** UK Product Development Team (Based in Oxfordshire)

To learn more about **InnoTab® 2** and other **VTech®** toys, visit www.vtechuk.com

CONTENTS

INTRODUCTION 1
- Included in this Package 1

PRODUCT FEATURES 2

GETTING STARTED 4
- Battery Installation 5
- AC Adaptor 6
- How to Play 6
- Desktop Menu 7
- Status Bar 7

CONTENT 8
- **InnoTab®** 2 Read, Play & Create Cartridge 8
- Built-in Apps 10
- Built-in Content 16
- Playing an **InnoTab®** Cartridge 17

ONLINE FEATURES 17
- Downloads Menu 17
- Inserting an SD Card 17
- Connecting to a Computer 18

VTech® Kidizoom® PHOTOS AND VIDEOS 21

CARE & MAINTENANCE 23

TROUBLESHOOTING 24

TECHNICAL SUPPORT 26

COPYRIGHT NOTICES 27

DISCLAIMER AND LIMITATION OF LIABILITY 27

END USER LICENSE AGREEMENT 28

INTRODUCTION

Thank you for purchasing **VTech® InnoTab® 2 The Learning App Tablet**! **InnoTab® 2** is a multi-function, touch screen tablet for 4-9 year olds. Children will love using **InnoTab® 2** to take photos and videos, read e-books, listen to music, play games and more. With SD card expandable memory (SD card not included), and new apps being added to the **VTech®** Learning Lodge Navigator® site all the time, **InnoTab® 2** is a great tablet for busy children on the go.

Included in this Package

- One **VTech® InnoTab® 2** Learning App Tablet (including 2 **InnoTab® 2** Styluses)
- One **InnoTab® 2** Read, Play & Create Cartridge
- One Learning Lodge Navigator® Installation CD
- One USB Cable
- One User's Manual

Learning Lodge Navigator® Installation CD

User's manual

USB cable

InnoTab® 2 Styluses

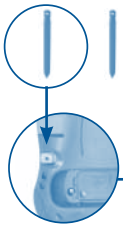

InnoTab® 2 Read, Play & Create Cartridge

InnoTab® 2
(Including 2 **InnoTab® 2** Styluses)

Warning: All packing materials, such as tape, plastic sheets, packaging locks, wire ties, and tags are not part of this toy, and should be discarded for your child's safety.

Note: Please keep the user's manual as it contains important information.

PRODUCT FEATURES

Rotating Camera

Camera Button

Touch Screen

Home Button

AC Adaptor Jack

Headphone Jack

Power Button

USB Port

Brightness Buttons

Microphone

Volume Buttons

Help Button

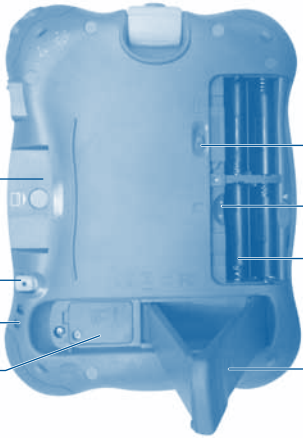

InnoTab® Cartridge Port

InnoTab® 2 Stylus and Stylus Holder

Wrist Strap Fastener (Strap not included.)

Backup Battery Slot & Cover

Battery Cover

Battery Door Lock Sliding Switch

SD Memory Card Slot (SD card not included)

Battery Compartment

Stand

PRODUCT FEATURES

FEATURES	ACTION
Rotating Camera	Rotate the camera to take pictures of yourself and your friends.
Touch Screen	Touch the screen with your finger or the **InnoTab® 2** stylus to play.
AC Adaptor Jack	Use this to connect an AC/DC adaptor (sold separately).
Headphone Jack	Use this to connect headphones (sold separately). **Note:** Maximum output voltage ⩽ 150mV.
Power Button	Press this button to turn **InnoTab® 2** on or off.
USB Port	Plug the included USB cable into this USB port to connect the tablet to your computer.
Brightness Buttons	Press these buttons to adjust the screen brightness.
Help Button	Press this button to replay voice instructions, or ask for a hint.
Microphone	Speak into this microphone to record your voice or play microphone games.
Volume Buttons	Press these buttons to adjust the sound volume.
Camera Button	Press this button to enter the Camera app; or if you are already in the Camera app, press this button to take a picture.
Home Button	Press this button to return to the **InnoTab® 2** desktop menu at any time.
InnoTab® Cartridge Port	Insert an **InnoTab®** cartridge (sold separately) into this slot to play.
InnoTab® 2 Stylus & Stylus Holder	Use your finger or this stylus to play. Always place the **InnoTab® 2** stylus back into the stylus holder after use.
Backup Battery Slot & Cover	The backup battery provides power for the clock. For backup battery replacement instructions, please see the **Care & Maintenance** section on page 22.

Wrist Strap Fastener	If you wish, attach a wrist strap here. (NOTE: Wrist strap not included.)
Battery Door Lock Sliding Switch	Slide this switch to open the battery door. Always replace the **InnoTab® 2** battery door after changing batteries.
SD Card Slot	Insert an SD memory card (not included). (NOTE: **InnoTab® 2** is compatible with SD and SDHC memory cards up to 32GB.)
Battery Compartment	Insert 4 AA batteries (not included). For battery installation instructions, please see the next section.
Stand	Pull out this stand to prop up **InnoTab® 2** and use it as a digital photo frame.

Battery Installation

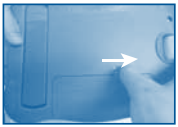

1

2

- Make sure the tablet is turned off.
- Locate the battery door lock sliding switch on the back of the tablet. Slide the switch to open the battery door, then remove the door.
- Insert 4 AA batteries as shown in image 2.
- Make sure to replace the battery cover.

Battery Notice

- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.

- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit: www.recycle-more.co.uk; www.recyclenow.com.

NOTE: When **InnoTab® 2** is running on batteries, you may see this icon appear on the screen . This indicates that battery power is low, and you should replace the batteries soon. Battery time remaining once the icon first appears is approximately 10-30 minutes, depending on the type of batteries in use. After that, **InnoTab® 2** will show the very low battery screen for 3 seconds, and then will turn off automatically.

To preserve battery life, **InnoTab® 2** will shut down automatically when there is no input for 8 minutes.

AC Adaptor

- Using a VTech® adaptor (AC/DC 7.5V ⎓ 400mA or 9V ⎓ 300mA) that complies with EN61558 is recommended.
- Make sure the tablet is turned off.
- Plug the adaptor (sold separately) into the AC adaptor jack on the top of **InnoTab® 2**.
- Plug the adaptor into a wall socket.

NOTE: The use of an adaptor will override the batteries. When the toy is not going to be used for an extended period of time, unplug the adaptor.

STANDARD GUIDELINES FOR ADAPTOR TOYS

- This toy is not intended for use by children under 3 years old.
- Only use the recommended toy transformer with this toy.
- The adaptor is not a toy.
- Never clean a plugged in toy with liquid.
- Do not connect the toy to more than the recommended number of power supplies.
- Do not leave the toy plugged in for extended periods of time.
- The toy is only to be connected to equipment of Class II (marked on the marking plate with a symbol ⧈).

How to Play

STEP 1: Turn InnoTab® 2 On

Turn **InnoTab® 2** on by holding down the Power button for a few seconds. A **VTech®** logo and an **InnoTab® 2** logo will appear and remain onscreen for a few seconds.

STEP 2: Personalise Your Profile

The first time you turn on **InnoTab® 2**, you will be asked to personalise your profile. When you are asked to enter your name, use the on-screen keyboard to type in your name, and touch OK when you're done. When you are asked

to take your profile picture, touch the on-screen shutter icon or Camera Button, and then touch OK.

STEP 3: InnoTab® 2 Desktop

In the **InnoTab® 2** desktop, you will see 14 built-in app icons*. Flick left or right to look at the apps available on the desktop menu, and then touch an app icon to start playing. (For more details about the built-in apps, please see the **Built-in Apps** section below.)

*Unlock the Art Studio app by registering your tablet online on the **VTech®** Learning Lodge Navigator®. For more details about connecting to Learning Lodge Navigator®, please see the **Connecting to a Computer** section below.

NOTE: When you start playing with **InnoTab® 2**, please go to the Clock app to update the date and time to the current date and time. See the **Clock** section below for more details.

Desktop Menu

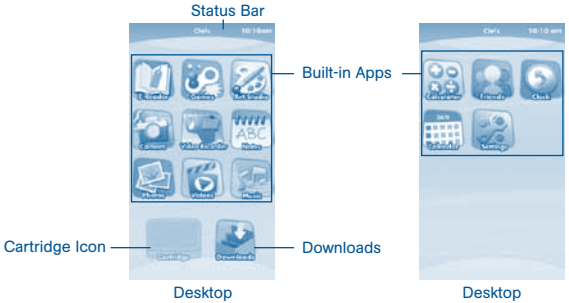

Status Bar: View the Profile name and current time.

Built-in Apps: Touch an app icon to play.

Cartridge Icon: If an **InnoTab®** cartridge (sold separately) is inserted, touch the cartridge icon to play.

Downloads: Touch the Downloads icon to view, play, or manage any content that you have downloaded from Learning Lodge Navigator®. (Please see the **Downloads Menu** section below for details.)

Status Bar

Name - The profile name is displayed here.

Time - This is the time display. Go into the Clock app to reset the time if it does not match your time zone.

Common Function Icons

Icon	Function
	Touch this to confirm you are finished with the current task.
	Touch this to cancel.
	Touch this to add a new item.
	Touch this to delete an item.
	Touch this to edit/modify.
	Touch this to go back/return to previous screen.
	Touch this to exit.
	Touch this to enter the delete mode.
	Touch this to enter the edit/settings mode.
	This indicates that the content has been locked in the Parent Settings. Hold ? to unlock the content before it can be deleted.

InnoTab® 2 Read, Play & Create Cartridge

Insert the **InnoTab® 2** Read, Play & Create cartridge into the cartridge port. You will see a cartridge icon appear at the bottom of the desktop menu. Touch the icon to play. (NOTE: The **InnoTab® 2** Read, Play & Create cartridge is compatible with **InnoTab® 2** only.)

E-Book: What's That Noise?

Rufus was a good old country dog. But one day, Rufus and his family packed up and moved to the city. Rufus needed to learn to be a city dog. The first thing he learnt was the city was LOUD! Read along with Rufus to find out "WHAT'S THAT NOISE?"!

Curriculum: Reading

Camera Game: Alien Rescue

Find the lost aliens on Earth to help them back home.

Curriculum: Matching

TIP: Turn your **InnoTab® 2** camera lens out (away from you) to play this game.

Creative Activity: Colour & Pop

Touch the Colour & Pop icon to colour a picture and see it move.

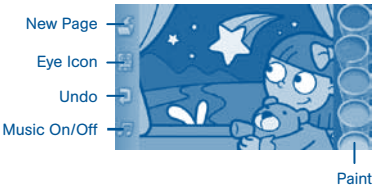

Touch the paint to choose a colour, and then touch the picture to fill in that colour on the picture.

Paint – Touch a paint can to choose a colour. Flick up or down to look at all the colours.

New Page – Touch this to open a new picture.

Eye Icon – Touch this to see your picture move. Tilt the tablet left, right, up, or down to find what is hiding in the picture.

Undo – Touch this to undo what you just did.

Music On/Off - Touch this to turn the background music on or off.

Built-in Apps

E-Reader

Touch the E-Reader icon to read e-books downloaded from Learning Lodge Navigator®. Flick left or right to move between the bookshelves and see all the e-books you have downloaded.

One e-book - What's That Noise? - is included on the **InnoTab® 2** Read, Play & Create cartridge. (Please see the **InnoTab® 2** Read, Play & Create Cartridge section above for details.)

Connect to Learning Lodge Navigator® to purchase and download more e-books. See the **Connecting to a Computer** section on page 18 for more details.

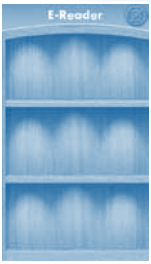

Games

Touch the Games icon to play the built-in games or games that you have purchased and downloaded from Learning Lodge Navigator®. Flick left or right to move between the game shelves.

One camera game - Alien Rescue - is included on the **InnoTab® 2** Read, Play & Create cartridge. (Please see the **InnoTab® 2** Read, Play & Create Cartridge section above for details.) And one motion-sensor game - Face Race - is included on your tablet at purchase. (Please see the **Built-in Content** section below for details.)

Connect to Learning Lodge Navigator® to purchase and download more games. See the **Connecting to a Computer** section on page 18 for more details.

Music

Touch the Music icon to listen to MP3 format songs you have transferred to your **InnoTab® 2**. You can purchase and download music from Learning Lodge Navigator®,

or you can transfer music to your **InnoTab® 2** from your computer using Learning Lodge Navigator®. Expand **InnoTab® 2** memory by inserting an SD memory card (not included). Connect your **InnoTab® 2** to Learning Lodge Navigator® and select File Manager to transfer music. See the **Connecting to a Computer** section on page 18 for more details.

Video Recorder

Touch the Video Recorder icon to record video. The maximum recording length for each video is 5 minutes.

Time - This is the elapsed time of the video now recording.

Record button - Touch this to start/stop recording.

Thumbnail - Touch this to view the video you have just taken.

WARNING: Video recording may take up memory quickly. Connect your **InnoTab®2** to Learning Lodge Navigator® and select File Manager to back up your videos to your computer regularly. See **Connecting to a Computer** Section on page 18 for more details.

Camera

Touch the Camera icon to take photos with fun decorations and effects.

Normal Mode - Touch this to take a photo without any decoration or effect.

Sticker Mode - Touch this to take a photo with a silly sticker.

Frame Mode - Touch this to take a photo with a frame.

Kaleidoscope - Touch this to take a photo through a kaleidoscope.
Funny Face - Touch this to make a funny face photo.
Thumbnail - Touch this to view the photo you have just taken.
Arrows - Touch these to see more stickers, frames, kaleidoscope effects or funny face effects.
Face Detection - Touch this to turn face detection on or off.
Shutter - Touch this to take a photo.
TIP: You can select the photo resolution by changing the Photo Size options in the Settings menu. More memory space is required for higher photo resolutions.
NOTE: Not all effects can be saved on all photo resolutions.

Videos

Touch the Videos icon to watch motion jpeg (MJPEG) format videos you have transferred to your **InnoTab® 2** from your computer, videos that you have purchased and downloaded from Learning Lodge Navigator®, or videos that you have taken with the Video Recorder app on your **InnoTab® 2**. Expand **InnoTab® 2** memory by inserting an SD memory card (not included). Connect your **InnoTab® 2** to Learning Lodge Navigator® and select File Manager to transfer videos.

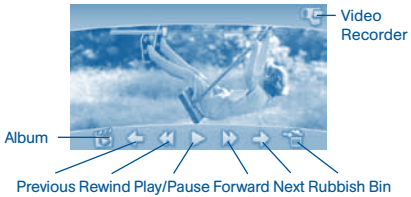

See the **Connecting to a Computer** section on page 18 for more details.

Album - Touch this to see a list of saved videos.
Previous – Touch this to go to the previous video.
Rewind – Touch this to rewind the video.
Play/Pause – Touch this to play or pause the video.
Forward – Touch this to fast forward the video.
Next – Touch this to go to the next video.
Rubbish Bin – Touch this to delete the current video.

Video Recorder - Touch this to use your **InnoTab® 2** Video Recorder.

For more details about transferring videos to your **InnoTab® 2**, please see the **VTech® Kidizoom® Photos and Videos** section on page 20.

Photos

Touch the Photos icon to look at jpeg format photos you have transferred to your **InnoTab® 2** and photos taken with the **InnoTab® 2** Camera app. You can transfer photos to your **InnoTab® 2** from your computer using Learning Lodge Navigator®. Expand **InnoTab® 2** memory by inserting an SD memory card (not included). Connect your **InnoTab® 2** to Learning Lodge Navigator® and select File Manager to transfer photos. See the **Connecting to a Computer** section on page 18 for more details.

Album - Touch this to see a list of saved photos.

Set Wallpaper – Touch this to set the current photo as your desktop wallpaper.

Previous – Touch this to go to the previous photo.

Play – Touch this to view a photo slideshow.

Next – Touch this to go to the next photo.

Rubbish Bin – Touch this to delete the current photo.

Camera - Touch this to use your **InnoTab® 2** Camera app.

TIP: Turn the Rotating Camera to the front to take a photo of yourself. Turn the Rotating Camera to the back to take a picture of your friends. You can change the viewing orientation between landscape and portrait by rotating the tablet.

For more details about transferring photos to your SD card, please see the **VTech® Kidizoom® Photos and Videos** section on page 20.

Art Studio

Unlock the Art Studio app by registering your tablet online on **VTech**® Learning Lodge Navigator®. For more details about connecting to Learning Lodge Navigator®, please see the **Connecting to a Computer** section on page 18.

Touch the Art Studio icon to draw a picture or edit a photo. Touch a tool on the right to start your creation.

Pencil – Touch this to draw with different coloured pencils.

Brush – Touch this to paint with different coloured brushes.

Magic Pen – Touch this to draw with fun colour and pattern pens.

Sticker – Touch this to put stickers on your creation.

Fun Tool – Touch this to play with silly tools – such as a hopping frog!

Eraser – Touch this and then touch the screen to erase what you've done.

New Page – Touch this to make a new creation. You can choose a page template or a photo to start with.

Save – Touch this to save your creation.

Reset – Touch this to reset the whole creation.

Undo – Touch this to undo what you just did.

Music On/Off – Touch this to turn the background music on or off.

TIP: Touch to go back to the toolbox menu.

Calendar

Touch the Calendar icon to look at or edit your calendar. To mark a day with a sticker, drag a sticker from the tool bar to the day. To add a note, touch the day, and then type in your note using the pop-up keyboard.

Touch to delete a sticker or a note.

You can save up to 500 stickers to mark your important dates!

Notes

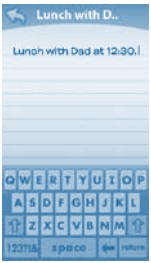

Touch the Notes icon to type a new note or view a note you have saved. Touch anywhere on the page to open the pop-up keyboard and start typing.

To look at your saved notes, flick left or right to see the previous or next note. To see a list of all your notes, touch .

You can save up to 500 characters per note and a maximum of 100 notes.

Friends

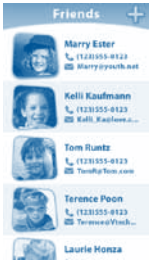

Touch the Friends icon to add a new friend or view your friends' info that you have saved.

Flick up or down to look at more friends. To view or edit a friend's information, touch that friend's name.

You can save info for a maximum of 20 friends.

Calculator

Touch the Calculator icon to do simple calculations.

TIP: Try shaking the tablet to see what happens.

Clock

Touch the Clock to set the time or date, or use the stopwatch.

Clock – Touch this to view or adjust the time.

Stopwatch – Touch this to use the stopwatch to count up.

Date – Touch this to view or adjust the date.

Settings

Touch the Settings icon to edit your profile name, set a profile picture, record a greeting message, set desktop wallpaper, change camera photo size, check memory usage, delete game records, lock content from deletion and view the **InnoTab® 2** firmware version number.

TIP: You can reset the tablet to factory settings by typing R-E-S-E-T into the My Name profile in Settings.

WARNING: Any data saved in internal memory will be lost. Data saved in an SD card (not included) will not be affected by resetting the tablet.

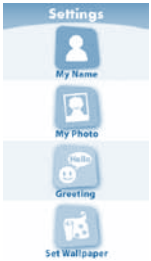

Built-in Content

G-Sensor Game: Face Race

Use the camera to put yourself in the game! Tilt the tablet left or right to balance your avatar.

Curriculum: Problem Solving

You can find this game in the Games app and Downloads menu.

Playing an InnoTab® Cartridge

If an **InnoTab®** cartridge (sold separately) has been inserted properly, you will see the cartridge icon at the bottom of the desktop menu screen. Touch the cartridge icon to play.

Register online to keep track of your child's learning journey with personalised recommendations. You can also connect to our Learning Lodge Navigator® to download great apps, e-books, music, videos and themes online. To install the **InnoTab® 2** version of the Learning Lodge Navigator® software on your computer, use the included Learning Lodge Navigator® Installation CD, or go to www.vtechuk.com/download to download and install it.

Downloads Menu

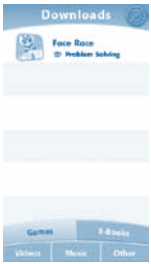

In the **InnoTab® 2** desktop, touch the Downloads icon to manage your downloaded content. Touch any category at the bottom to see the downloaded items in that category.

Touch to enter the delete mode.

In delete mode, touch an item to delete it. A pop-up menu will ask if you really want to delete that item. Touch Yes to confirm, or No to cancel. If you see , hold to unlock the content. The built-in game Face Race cannot be deleted.

Inserting an SD Card

You can insert an SD card (not included) into your **InnoTab® 2** to expand available memory for downloaded content, photos, videos or music. **InnoTab® 2** is compatible with memory cards up to 32GB.

- Make sure the tablet is turned off.
- Locate the SD card slot on the back of **InnoTab® 2** under the battery cover.

- Make sure the SD card is not write-protected. Insert the SD card, as shown in images 3 & 4.

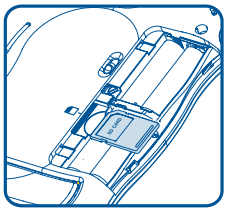

3

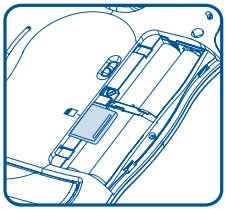

4

Connecting to a Computer

- Instructions for PC:

  Insert the Learning Lodge Navigator® CD into the CD-ROM drive.

  Wait for the installation screen to come up. If the installation screen does not come up automatically, go to My Computer and then right click on the CD-ROM drive. From the drop-down menu, choose Explore and double click the VTech_Toy_Setup.exe icon to start it up manually.

  Select the **InnoTab® 2** version of Learning Lodge Navigator® on the installation screen.

- Instructions for Macintosh Computer:

  Insert the Learning Lodge Navigator® CD into the CD-ROM drive.

  Double click the VTech Toy Setup icon in the pop-up window.

- Click Install to begin the installation.

- Follow the on-screen prompts to install Learning Lodge Navigator®.

  NOTE: The installation program for the **InnoTab® 2** version of Learning Lodge Navigator® can be also downloaded from www.vtechuk.com/download
- Insert an SD card into your **InnoTab® 2**, as shown on Page 18, if you wish to expand the available memory.
- Turn on your **InnoTab® 2**.
- Locate the USB port on the upper right-hand side of your **InnoTab® 2** and open the rubber port cover.
- Insert the smaller end of the included USB cable into the USB port on your **InnoTab® 2**.

- Insert the larger end of the USB cable into a USB port on your computer. The USB port is usually marked with the symbol that appears on the USB port cover of your **InnoTab® 2**. Please refer to images 5 & 6 below.

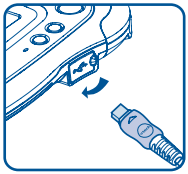

5

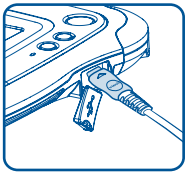

6

After connecting to your computer with the USB cable, your **InnoTab® 2** screen will show a Connected to Computer screen (image 7). For help using the Download Centre refer to the Help section of the Learning Lodge Navigator®.

7

VTech® Kidizoom® Photos and Videos

Slide out the stand until it clicks into place. Then use it to set up your **InnoTab® 2** as a photo frame.

You can use the stand to set up the **InnoTab® 2** in either portrait or landscape orientation.

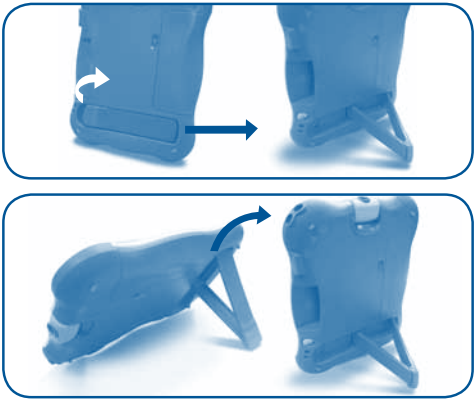

Note: For your safety, please do NOT place your fingers into the sliding hinge mechanism.

Any photos or videos captured by a **VTech® Kidizoom® Camera™** and saved on an SD card can be viewed without conversion on **InnoTab® 2**. Insert the SD card that contains the photos/videos directly into the **InnoTab® 2**. Or you may transfer photos/videos from your computer to your **InnoTab® 2** using Learning Lodge Navigator®. See the **Photos** section above for more details.

InnoTab® 2 supports JPEG formatted photos and MJPEG/H.264 baseline profile formatted video playback. Other video formats can be converted to work with **InnoTab® 2** using third party software (not included). For further

information on video file conversion, enter 'media format converter' into an Internet search engine.

There may be legal restrictions associated with the use of commercial video files, movies, programs and other content for which **VTech®** accepts no responsibility or liability. Users should take responsibility for observing relevant copyright law in their country for this type of media.

When converting your video for InnoTab, please follow the following guidelines:

Supported format:

MJPEG/H.264 baseline profile video and MP3 audio in AVI file

Recommended resolution:

480x272 if source is 16:9 and 320x240 if source is 4:3. Other resolutions are supported but are not optimal for the device.

Recommended Video bitrate:

600 Kbps. Other bitrates are supported but are not optimal for the device.

Recommended Audio bitrate:

96 Kbps. Other bitrates are supported but are not optimal for the device.

Maximum file size:

2GB (over 5 hours of play time using the recommended setup).

The following freeware programs may be used to convert most videos:

Avanti GUI

eRightSoft Super©

MediaCoder

TEncoder

(All trademarks are the property of their respective owners. **VTech®** does not endorse, support or accept any liability for the freeware listed above.)

NOTE: Do not disconnect **InnoTab® 2** or the computer while files are downloading. After you have finished, turn off the tablet to save power. When not connected to a computer, please close the USB port cover on the **InnoTab® 2** for safety.

Care & Maintenance

1. Keep **InnoTab® 2** out of direct sunlight and away from direct sources of heat.
2. Remove the batteries when not using it for an extended period of time.
3. Avoid dropping it. NEVER try to dismantle it.
4. Always keep your **InnoTab® 2** away from water.
5. Please regularly examine the AC adaptor (sold separately), checking for damage to the cord, plug, adaptor or other parts. Do not use the adaptor if there is any damage to it.

Using the InnoTab® 2 touch screen and stylus:

- Use only enough pressure to operate the game. Too much pressure may damage the touch screen.
- Do not use the stylus if it is broken.
- Do not use any other type of stylus on the touch screen other than the **InnoTab® 2** stylus.
- Put the stylus back in the stylus holder when not in use.

Cleaning the InnoTab® 2 touch screen

- Slightly dampen a soft, lint-free cloth with a little water and wipe the screen to loosen dirt.
- Using a clean and dry cloth, wipe the screen dry. Repeat these two steps as needed.

Cleaning the InnoTab® 2 cabinet

- Keep your **InnoTab® 2** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.

Backup battery replacement

- Make sure the tablet is turned off.
- Locate the battery cover on the back of the tablet, under the stand. Locate the backup battery cover on the back of the tablet, then open it with a screwdriver as shown in image 8.

• Insert 1 3V CR2032 battery in the battery compartment with the + side facing up as show in image 9.

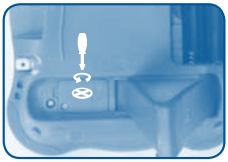

8

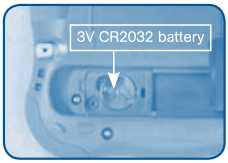

9

• Make sure to replace the backup battery cover.

WARNING

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colours or patterns, especially on television. While the **InnoTab® 2** Learning App Tablet does not contribute to any additional risks, we do recommend that parents supervise their children while they play video games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your doctor. Please note that focusing on an LCD screen at close range for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

Troubleshooting

Problem	Possible Reason	Solution
Screen displays with no sound.	Volume is turned down.	Adjust the volume control.
	Headphones are connected.	Unplug headphones from headphone jack.
Screen turns on, then immediately off.	Battery power low.	Replace the battery.

No picture (or incorrect picture) on screen, and pressing the Power button has no effect.	Program needs to be reset.	Disconnect all power supplies (batteries and adaptor), then reconnect all power supplies.
		Press the Power button.
		Remove the cartridge, clean it if necessary, and then re-insert it into the **InnoTab® 2**.
No screen display after pressing Power button.	Battery power low.	Replace the battery.
	Incomplete battery installation.	Make sure to install all batteries in the battery compartment.
	No AC adaptor power.	Securely connect the AC adaptor or car adaptor to both the **InnoTab® 2** and the power source.
The cartridge icon does not appear on desktop.	Poor cartridge connection.	Remove the cartridge, clean it if necessary, and then re-insert it into the **InnoTab® 2**.
USB connection window does not pop up after connecting to computer.	Poor USB cable connection.	Securely connect the USB cable to **InnoTab® 2** and the computer.
	Connection is running through USB hub.	Connect the **InnoTab® 2** directly to the computer, without using a hub.
Clock time is not accurate.	Backup battery power low.	Replace backup battery (for backup battery replacement instructions, please see the **Care & Maintenance** section on page 23).
Touch screen is inaccurate or it is impossible to select the correct icon on the screen.	Touch screen requires calibration.	Turn the **InnoTab® 2** OFF. Then hold , and down when turning the **InnoTab® 2** ON. Follow the steps on the screen.

Inserted an SD card (not included), but the tablet cannot recognise it.	SD card format is not FAT32.	Format the SD card to FAT32 on your computer.
Files copied to the tablet's internal memory disappeared.	The tablet's memory was not formatted to FAT32.	If formatting the memory is necessary, make sure it is formatted to FAT32.

If your **InnoTab® 2** does not respond to an inserted cartridge, please carefully try the following:

- Remove all batteries and unplug all wiring.
- Use a cotton swab dipped in rubbing alcohol or an alcohol-based window cleaner to gently clean the contact area of the cartridge slot.
- If necessary, dry all the clean contact areas with a soft, lint-free cloth.
- Please make sure that all parts are completely dry before restoring power.

Static electricity may cause the **InnoTab® 2** to malfunction. In some cases, the game play score stored in the tablet memory may be lost. In cases where **InnoTab® 2** is malfunctioning due to static electricity, reset the tablet by removing and reinstalling the batteries, or by unplugging and replugging the AC adaptor. Or, if the static electricity malfunction occurred during the downloading process, disconnect the USB cable, delete the corrupted file, and reset the tablet as described above. Then reconnect the USB cable and restart the download process.

Technical Support

- If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:
- The name of your product or model number (the model number is located on the back of the display panel).
- The actual problem you are experiencing.
- The actions you took right before the problem occurred.

Internet : www.vtechuk.com
Phone : 01235 546810 (from UK), or +44 1235 546810 (outside UK)

Copyright Notices

Copyright 2012 **VTech®** Electronics Europe PLC. All Rights Reserved. **VTech®** and the **VTech®** logo are registered trademarks of **VTech®**. Learning Lodge Navigator® is a registered trademark of **VTech®**. **InnoTab® 2** is a registered trademark trademark of **VTech®** Electronics Europe PLC. All other trademarks are property of their respective owners.

IMPORTANT NOTE:

Creating and developing the **InnoTab® 2** the Learning App Tablet is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK), or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Disclaimer and Limitation of Liability

VTech® Electronics Europe PLC and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech®** Electronics Europe PLC and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech®** Electronics Europe PLC and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

Company: **VTech®** Electronics Europe PLC
Address: Napier Court, Abingdon Science Park, Abingdon, Oxon, OX14 3YT.
Phone : 01235 546810 (from UK), or +44 1235 546810 (outside UK)

END USER LICENSE AGREEMENT

THIS IS A LEGAL AGREEMENT BETWEEN YOU AND VTECH INC. ("VTECH"), STATING THE TERMS THAT GOVERN YOUR USE OF SOFTWARE FOR INNOTAB® 2 OR IN CONNECTION WITH THE APPLICATION OF SOFTWARE ("SOFTWARE"). "SOFTWARE" INCLUDES AUDIO FILES FOR THE INNOTAB® 2 SYSTEM.

BY ACTIVATING, USING, DOWNLOADING OR INSTALLING THIS SOFTWARE , YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT. YOUR RIGHT TO USE THE SOFTWARE IS CONDITIONAL UPON YOUR AGREEMENT TO THESE TERMS. IF YOU DETERMINE THAT YOU ARE UNWILLING TO AGREE TO THE TERMS OF THIS LICENSE AGREEMENT, YOU HAVE NO RIGHT TO USE THE SOFTWARE AND YOU SHOULD PROMPTLY RETURN THE SOFTWARE TO VTECH OR DELETE IT.

IF YOU ARE UNDER THE AGE OF 18 OR ARE OTHERWISE CONSIDERED A MINOR IN YOUR JURISDICTION, YOU SHOULD REVIEW THESE TERMS AND CONDITIONS WITH YOUR PARENT OR GUARDIAN (COLLECTIVELY, "PARENT") AND MAKE SURE THAT YOUR PARENT UNDERSTANDS AND AGREES ON YOUR BEHALF TO THESE TERMS AND CONDITIONS.

WHEREVER THIS AGREEMENT REFERS TO "YOU" OR "YOUR," IT IS MEANT TO INCLUDE BOTH PARENT AND CHILDREN USERS, EXCEPT WHERE A CHILD IS NOT OF SUFFICIENT LEGAL AGE TO ENTER INTO A BINDING CONTRACT (SUCH AS AN E-COMMERCE TRANSACTION) OR PROVIDE ANY REQUIRED CONSENTS (SUCH AS CONSENT TO DATA COLLECTION, PROCESSING, OR TRANSFERS), IN WHICH CASE THE PARENT OF SUCH CHILD HEREBY ACKNOWLEDGES AND AGREES HE/SHE IS ACTING ON THE CHILD'S BEHALF TO EFFECTUATE SUCH CONTRACTS OR CONSENTS AND IS FULLY LIABLE FOR THE ACTIONS OR INACTIONS OF SUCH CHILD WITH RESPECT TO THE USE OF THE SOFTWARE AND RELATED SERVICES.

1. OWNERSHIP. The Software and Documentation (including all content contained within the Product) are owned by VTECH, or its licensors, and are protected by international copyright and other intellectual property laws. The Software and Documentation shall only be used by you in accordance with this Agreement. The Software and Documentation are licensed, not sold. Except as specifically set forth herein, VTECH and its licensors retain all right, title and interest, including all intellectual property rights, in and to the Software and Documentation.

2. LICENSE TERMS. VTECH grants to you, subject to the terms, conditions and limitations further defined in this Agreement, a non-exclusive, non-sublicenseable, non-transferable license for non-commercial use, and to use the Documentation in connection with such use of the Software. Any modifications, upgrades, error

corrections, or other updates to the Software provided by VTECH to you shall be deemed part of the Software and use thereof shall be governed by the terms and conditions of this Agreement, unless the parties have entered into a separate, written agreement governing such modifications, upgrades, error corrections, or other updates. The Software may contain open source or other third party software that requires VTECH to make available to you certain notices and code as well as providing you with license terms governing your rights to any such open source code. You agree that VTECH may provide you with all such notices, code and license terms at the website http://www.vtechuk.com/download/notice.

3. RESTRICTIONS ON REVERSE ENGINEERING AND SECURITY. Except to the extent otherwise expressly and unambiguously authorised by VTECH or to the extent such restrictions are explicitly prohibited by applicable law, you shall NOT reverse engineer, decompile, disassemble, translate or attempt to learn the source code of the Software (ii) copy, modify, create derivative works of, distribute, sell, assign, pledge, sublicense, lease, loan, rent, timeshare, deliver or otherwise transfer the Software (iii) remove from the Software, or alter or add, any copyright, trademarks, trade names, logos, notices or markings (iv) violate, tamper with or circumvent any security system or measures implemented by VTECH which are designed to prevent unauthorised copying of the Software. Any such forbidden use shall immediately terminate your license to the Software without any prior notice.

4. LIMITED WARRANTY. VTECH warrants to you – subject to your compliance with the terms herein – that for a period of ninety (90) days from the date you purchase the Product, the Software will substantially conform to VTECH's published specifications for the Software. Your sole and exclusive remedy under the foregoing warranty shall be for VTECH, at its choice, to use commercially reasonable efforts to correct any substantial non-conformity of the Software reported to VTECH in writing within the warranty period and/or provide a replacement copy of the Software. The foregoing warranty shall not apply to any non-conformity that is caused by (i) the use or operation of the Software with an application or in an environment other than that intended or recommended by VTECH, (ii) modifications to the Software not made by VTECH or (iii) third party hardware or software provided by any third party.

VTECH MAKES NO WARRANTIES THAT THE SOFTWARE IS ERROR FREE OR IS SUITABLE FOR YOUR PURPOSES. VTECH MAKES NO WARRANTIES OTHER THAN THOSE SET FORTH ON THE PREVIOUS PAGE, AND HEREBY DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY, WITH RESPECT TO THE SOFTWARE OR DOCUMENTATION, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY VTECH, ITS RESELLERS, AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY.

5. LIMITATION OF LIABILITY. IN NO EVENT SHALL VTECH BE LIABLE FOR ANY LOSS OF PROFITS, USE OF DATA, COST OF REPLACEMENT GOODS OR HARDWARE, OR OTHER INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OR INABILITY TO USE THE SOFTWARE DOWNLOAD OR DOCUMENTATION, EVEN IF VTECH HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND NOTWITHSTANDING THE FAILURE OF ESSENTIAL PURPOSE OF ANY REMEDY. YOU AGREE THAT IN NO EVENT WILL VTECH'S AGGREGATE LIABILITY HEREUNDER OR RELATED TO YOUR USE OF THE SOFTWARE OR DOCUMENTATION EXCEED THE AMOUNT PAID FOR THE PRODUCT AND/OR SOFTWARE.

6. TERMINATION. This License Agreement will automatically terminate if you fail to comply with any term thereof. No notice shall be required from VTECH to effect such termination.

CLASS 1
LED PRODUCT

PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
   Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtechuk.com

2012 © VTech
Printed in China
91-002732-001 UK